

## INSTALLATION AND OPERATING INSTRUCTIONS



Before installation, you should carefully read this manual, and pay attention to safety cautions and instructions in this manual. Our factory is neither responsible for nor is reliable for paying compensation for personal injury, pump damage and other property losses caused by violation of safety cautions.

### 1. APPLICATIONS

1. It is applicable to household water supply, equipment support, pipeline pressurization, garden watering, vegetable greenhouse watering, fish farming and poultry raising, industrial and mining, water supply and drainage of enterprises and high-rise buildings, central air conditioner and centralized heating circulation system, etc.

2. Transfer clean water and other non-corrosive liquids with low viscosity; do not transport inflammable, explosive, gasified liquids and liquids containing solid particles or fibers. The PH value should be within 6.5-8.5.

### 2. IDENTIFICATION CODES

CSP 05 A 16 S

- Features S=Standard
- Hertz 5=50Hz, 6=60Hz
- Phase 1=Single phase, 3=Three phase
- Voltage A=115V, C=230V, F=110/220V
- HPx10
- Series Centrifugal Pump

### 3. TECHNICAL DATA

Max. Flow: 1800L/min  
 Max. Head: 75m  
 Output power: 0.25~11kW  
 Max. Suction: 8 m  
 Insulation grade: IP44  
 Protection grade: F  
 Max. ambient temperature: +40  
 Max. liquid temperature: +60



### 4. IMPLEMENTATION STANDARDS

IEC/EN 60335-1 Household and similar electrical appliances--safety Part1:General requirements.  
 IEC/EN 60335-2-41 Household and similar electrical appliances--safety Part2-41:Particular requirements for pump.  
 2006/95/EC Low voltage directive.





### 3. SAFETY PRECAUTIONS

1. To ensure normal and safety operation of the electric pump, read manual carefully before use.

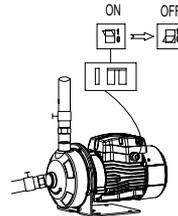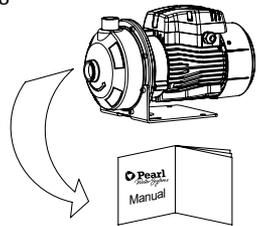


2. The electric pump should have reliable grounding to prevent short circuit; for safety, leakage protection switch should be equipped and be careful not to wet the power plug; socket should be connected in damp - proof area.

3. Do not touch the electric pump while working; do not wash, swim near working area or let livestock into the water to avoid accidents.

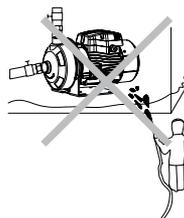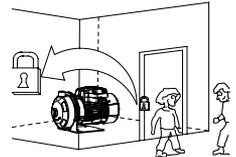


4. Avoid splashing pressured water to the electric pump as well as prevent the pump immersed by water.


5. Keep the pump in ventilation.

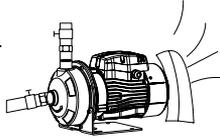

6. In case ambient temperature is lower than 4 or the pump is not used for a long time, empty liquid the pipeline system to avoid ice cracking of the pump chamber. Do not operate the pump for a long time without water in it.


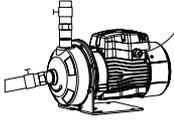


7. The pumped liquid maybe hot and under high pressure, before moving and demounting the bump, valves in both sides of the bump should be turned off first and then empty liquids in the pump and pipelines so as not to be scalded.

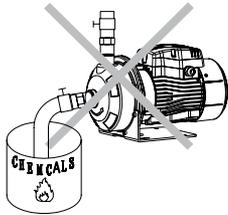


8. Do not transfer any inflammable, explosive or gasified liquids that beyond the stipulation.

9. Ensure the pump will not be accidentally turned on while installing and maintaining; if not used for a long time, cut off the power first and then turn off valves in inlet and outlet of the pump.

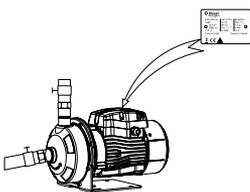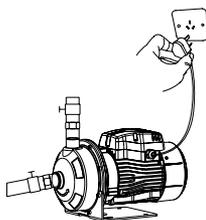

10. Power supply should be in accordance with the voltage stated in the nameplate. If not used for a long time, put the pump in dry, ventilated and cool place under room temperature.

## 7. PRODUCT STRUCTURE

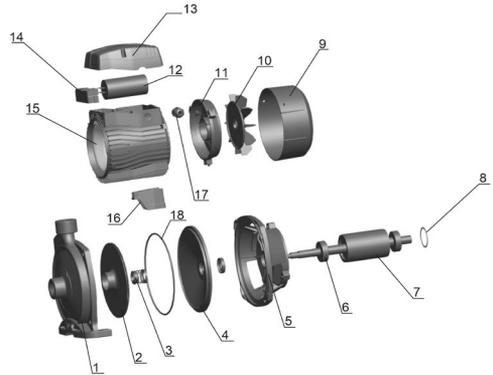


### POS. PART

1	Pump body	10	Fan
2	Impeller	11	End plate
3	Mechanical seal	12	Cable holder
4	Seal holder	13	Capacitor
5	Pump support	14	Capacitor box
6	Bearing	15	Terminal board
7	Rotor	16	Stator
8	Spring washer	17	Bracket
9	Fan cover	18	O-sealing ring

## 4. PIPELINE INSTALLATION



*This product should be installed and maintained by personnel who is proficient in this manual and has special qualifications. Installation and operation should be in accordance with local regulations and recognized operation standards. Install pipelines properly as stipulated in the manual and meanwhile conduct frost protection measures for the pipeline.*

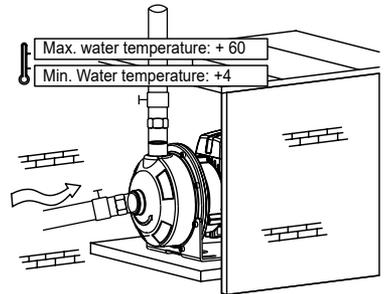


4.1 For pump installation, the inlet pipe should be as short as possible with the least turnings. The pump should be installed in ventilated and dry environment. It could be installed outside, provided having proper covering to prevent rain and wind.

4.2 For pipeline use, valves should be installed on inlet and outlet pipelines and the inlet pipeline should be installed with check valve.


## NEGATIVE SUCTION

### CORRECT INSTALLATION

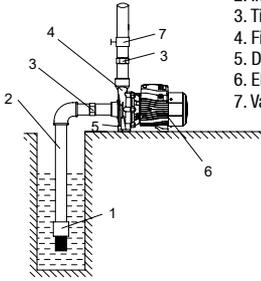


1. Foot valve
2. Inlet pipe
3. Tie-in
4. Filling plug
5. Drain plug
6. Electric pump
7. Valve

### INCORRECT INSTALLATION

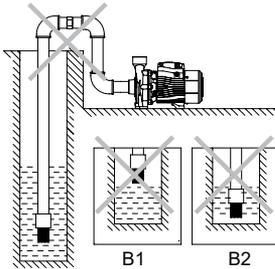


## POSITIVE SUCTION

### CORRECT INSTALLATION

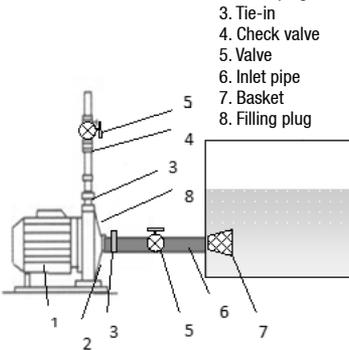

1. Waterpump
2. Drain plug
3. Tie-in
4. Check valve
5. Valve
6. Inlet pipe
7. Basket
8. Filling plug

### INCORRECT INSTALLATION

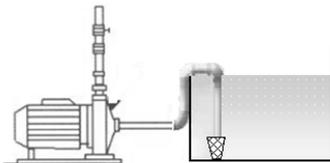

## INSTALLATION PRECAUTIONS FOR INLET PIPELINES

1. While installing the electric pump, do not use too soft rubber tube for the inlet pipeline, avoiding to be sucked flat.
2. The foot valve should be vertically placed and installed 30cm from water bottom to avoid sucking in sands and stones (B2);
3. Joints of the inlet pipelines should be sealed with the least elbows, no water can be sucked.
4. Diameter of the inlet pipe should be at least in accordance with that of the water inlet, so as to avoid too much water loss which will influence outlet performance.
5. Pay attention to drop of water level while using, the foot valve should not be above the water surface (B1).
6. In case the inlet pipe is longer than 10m or its lifting height exceeds 4m, the pipe diameter should exceed diameter of water inlet of the pump.
7. Ensure the pumped will not be affected by pipeline pressures while installing the pipelines.
8. Filter should be installed in inlet pipelines so as to avoid solid particles to enter into the electric pump.


## INSTALLATION PRECAUTIONS OF THE OUTLET PIPELINE

1. Pipe diameter of the outlet pipeline should be at least in accordance with that of the water outlet, so as to reduce its voltage drop, high flow rate and noise to the minimum.

## 6. ELECTRICAL CONNECTION



*Unless the power is off, do not wiring the junction box. The electric pump should have reliable grounding to prevent current leakage with leakage protection switch being equipped.*

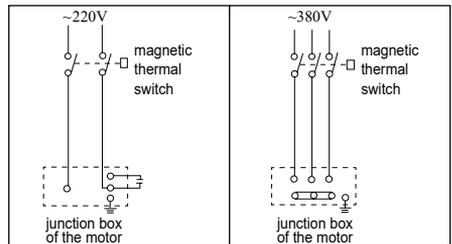

6.1 Electrical connection and protection should be conducted according to stipulations. Specification of working voltage is marked on the nameplate; please ensure the motor is in accordance with power supply.


6.2 In case the working area of the electric pump is too far from the power supply, power transmission lines should be of a heavier gauge, otherwise the electric pump cannot work normally because the voltage drop is too dramatic.

6.3 In case the electric pump is used outdoor, extended lines should apply rubber cables for outdoor use.


6.4 Check rotation of the motor (three-phase motor).

6.5 Check whether operation of the electric pump is normal, rotation is correct, which could be observed from the fan blade terminal, e.g. clockwise rotation means correct direction. In case the rotation is incorrect, cut off power and exchange the two power leads.

#### SINGLE PHASE CONNECTION 110V or 220V

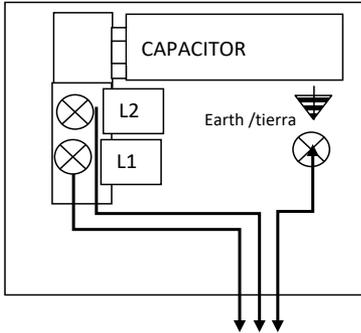


#### SINGLE PHASE CONNECTION 220/440V

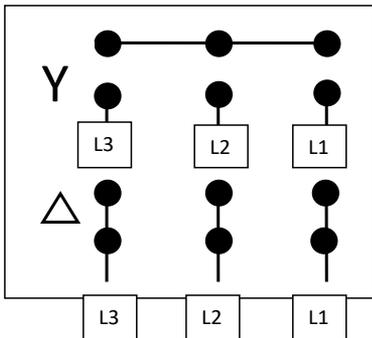

## 5. START-UP AND MAINTENANCE



*Do not start up the pump before the pump chamber is filled with water.  
Do not touch the electric pump unless its power has been cut off for at least 5 minutes.  
Do not dismount the pump body unless water in the pump chamber is emptied.*

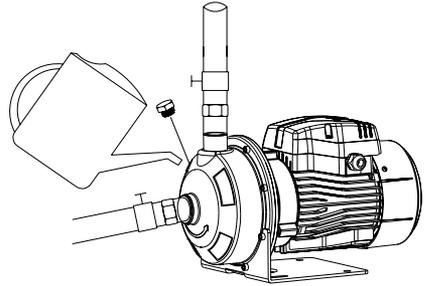

Rotate the fan blade before start-up, check whether the pump rotation is flexible and then unscrew the water-filling plug, fill the pump chamber with clean water from the water injection hole, then tighten the plug screw after gas has been completely discharged. The valve should be shut tightly while starting up the pump. After the pump discharges water and operates normally, adjust the valve to the required flow (flow and lift will be displayed on the nameplate).

#### ATTENTION:

1. In case no water is discharged after being started for more than 5 minutes with water filled, turn off the electric pump, re-fill water or check whether the inlet pipeline has leakages.
2. In case of any frost and ice damages, please open the drain plug to empty water in the pump chamber. When start up the pump again, open the drain plug, fill water and tighten it and then the pump is usable.
3. In case not use for a long time, water in the pump should be emptied. The pump body, impeller and support should be cleaned and coated with anticorrosive oil before they are put in a ventilated and dry place for use.
4. In case the pump is halted for a long time, start it up again according to above diagram.
5. In summer or when the ambient temperature is high, pay attention to ventilation, avoid dew on electrical parts which will result in electrical faults.
6. In case the motor is hot or abnormal, cut off the power immediately and check faults according to the following table.

## 8. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The motor can not be started	Single-phase power supply (three-phase electric motor): a. poor connection of the power switch b. fuse is burned out c. loose power lead d. phase failure of the cable	a. repair switch contact or replace the switch b. replace the safety fuse c. check and tighten the power connector d. repair or replace cables
	Capacitor is burned out	Replace with a same type capacitor (send to the maintenance point for repair)
	The rotating shaft and bearing are jammed.	Replace the bearing (send to the maintenance point for repair)
	Impeller is jammed.	Turn rotating shaft of the fan blade terminal with screw driver to let it rotate flexibly or demount the pump body to clear sundries.
	Stator winding is damaged	Replace winding coils (send to the maintenance point for repair)
The motor is in operation, but no water is discharged	Incorrect direction of pump rotation	Invert two-phase wirings of the motor (three-phase motor)
	The pump is not fully filled with water	Re-fill the pump with water.
	The impeller is damaged	Replace the impeller (send to the maintenance point for repair)
	Leakage of the suction pipe	Check sealing of various joints of the inlet pipelines
	Water level is too low	Adjust installation height of the pump
	Freeze caused by accumulated water in the pipeline or the chamber	Start up the pump after ice is melted
Insufficient pressure	Incorrect pump type	Select suitable pump
	The inlet pipeline is too long or with too many bends, pipe diameter is not selected as required.	Apply the pipe with the stipulated diameter, and make the inlet pipe short.
	Inlet pipeline, filter screen or pump chamber is blocked by foreign materials	Clean pipeline, foot valve or pump chamber, clear sundries
Motor works intermittently or the stator winding is burned out	The impeller is jammed or overload operation for a long time	Clear sundries in the pump chamber; operate the pump under the rated flow as much as possible.
	Incorrect grounding, broken cable or the electric pump is hit by lightning.	Seek for the reason, and replace winding coils.
Leakage of mechanical seal	The mechanical seal is worn and torn by impurities.	Clear or replace the mechanical seal
Abnormal noise from the pump	Noise from the bearing	Replace with the same type bearing
	Impeller is jammed.	Remove sundries
	Excessive flow	Adjust to the range displayed on the nameplate before use